




Irrigation System Backflow Assembly Removal

*****A permit is required by local municipality for backflow removal. Proof of permit shall be provided to the District.*****

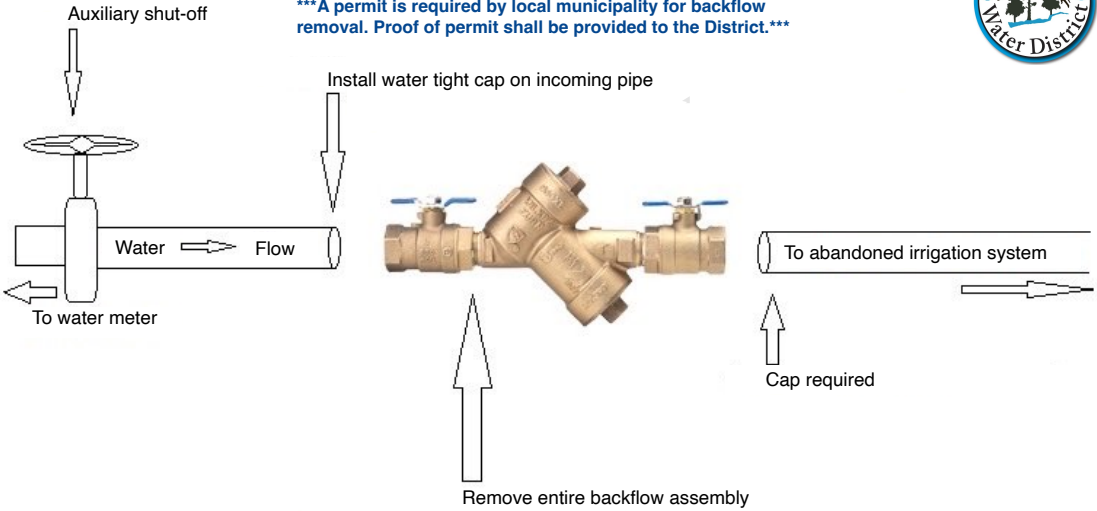

Turn off incoming water source, remove backflow assembly, and cap pipe at both ends (beginning and end) of the irrigation line. Customers must use their shutoff valve and not the District curb stop. If water isolation cannot be achieved by using the customer shutoff valve, owner shall contact the District 24 hours in advance so a water operator can be dispatched to operate the curb stop.